

REMOTE CONTROLS COMPATIBILITY CHART

		REMOTE CONTROLS									
REMOTE CONTROL FEATURES		Stand-by, Rec., Zoom	Stand-by, Rec., Zoom Focus	Stand-by, Rec., Zoom Focus, Iris (1*), Rec review	Rec, Zoom, Fast Zoom Rec Review	Rec, Zoom, Fast Zoom Rec Review	Rec, Shutter release, Focus, LV on/off, LV zoom, Focus memory	Rec, Shutter release, Focus, LV on/off, LV zoom, Focus memory, ISO, Aperture, Shutter speed, Colour temp, Exposure comp	Adaptor cable jack 2.5mm to Sony AV		NOTES
MANUFACTURER	CAMERA MODEL	MVR901 ECPL	MVR901 ECLA	MVR901 EPLA	MVR901 ECEX	MVR901 EPEX	MVR911 ECCN	MVR911 EECN	522AV		
<b>SONY</b>											
SONY	PMW-150										
SONY	PMW-200										
SONY	PMW-300										
SONY	PMW-EX280										
SONY	PMW-EX3										
SONY	PMW-EX1R										
SONY	PMW-EX1										
SONY	PXW-X280										
SONY	PXW-F55	• L	•	•							
SONY	PXW-F57	• L	•	•							
SONY	PXW-Z150	• L	•	•							
SONY	HXR-MC2000	• L	•	•							
SONY	HXR-MC2500	• L	•	•							
SONY	HXR-MC50	• L	•	•							
SONY	HXR-NX30	• L	•	•							
SONY	HXR-NX3D1	• L	•	•							
SONY	HXR-NX3	• L	•	•							
SONY	HXR-NX5	• L	•	•							(3*)
SONY	HXR-NX70	• L	•	•							(3*)
SONY	HXR-NX100	• L	•	•							(3*)
SONY	NEX-EA50	• L	•	•							(2*)
SONY	NEX-FS100	• L	•	•							(2*)
SONY	NEX-FS700	• L	•	•							(2*)
SONY	NEX-VG20	• L	•	•							
SONY	NEX-VG30	• L	•	•							
SONY	NEX-VG900	• L	•	•							
SONY	HVR-A1	• L	•	•							
SONY	HVR-HD1000	• L	•	•							
SONY	HVR-S270	• L	•	•							
SONY	HVR-V1	• L	•	•							
SONY	HVR-Z5	• L	•	•							
SONY	HVR-Z7	• L	•	•							
SONY	HVR-Z1	• L	•	•							
SONY	HDR-AX2000	• L	•	•							
SONY	HDR-FX1	• L	•	•							
SONY	HDR-FX7	• L	•	•							
SONY	HDR-FX1000	• L	•	•							
SONY	DSR-PD175P	• L	•	•							
SONY	DCR-DVDxxx	• L	•	•							
SONY	DCR-SRxx	• L	•	•							
SONY	DCR-SRxx (except DCR-SX22E)	• L	•	•							
SONY	DCR-Cxxx	• L	•	•							
SONY	DCR-VX2000	• L	•	•							
SONY	HDR-SRxx	• L	•	•							
SONY	HDR-TGxx	• L	•	•							
SONY	HDR-TD30V	• L	•	•							
SONY	HDR-XRxx	• L	•	•							
SONY	HDR-LUX10	• L	•	•							
<b>Canon</b>											
Canon	EOS C100	• L	•	•							(4*)
Canon	EOS C100 Mark II	• L	•	•							(4*)
Canon	EOS C300	• L	•	•							(4*)
Canon	EOS C500	• L	•	•							(4*)
Canon	EOS C700	• L	•	•							(4*)
Canon	XF305	• L	•	•							
Canon	XF300	• L	•	•							
Canon	XF205	• L	•	•							
Canon	XF200	• L	•	•							
Canon	XF105	• L	•	•							
Canon	XF100	• L	•	•							
Canon	XA10	• L	•	•							(5*)
Canon	XA20	• L	•	•							(5*)
Canon	XA25	• L	•	•							(5*)
Canon	XA30	• L	•	•							(5*)
Canon	XA35	• L	•	•							(5*)
Canon	XL H15	• L	•	•							
Canon	XL H1A	• L	•	•							
Canon	XH A1/A1S	• L	•	•							
Canon	XH G1/G1S	• L	•	•							
Canon	XL H1	• L	•	•							
Canon	XM1 / XM2	• L	•	•							
Canon	GL1 / GL2	• L	•	•							
Canon	HF-G25	• L	•	•							
Canon	HF-G30	• L	•	•							
Canon	HF-G40	• L	•	•							
Canon	EOS 1Dx						•	•			
Canon	EOS 1Dc						•	•			
Canon	EOS 6D						•	•			
Canon	EOS 5D mkIII						•	•			
Canon	EOS 5D mkII						•	•			
Canon	EOS 70D						•	•			
Canon	EOS 60D						•	•			
Canon	EOS 1D mkIV						•	•			
Canon	EOS 7D						•	•			
Canon	EOS 600D						•	•			
Canon	EOS 550D						•	•			
Canon	EOS 500D						•	•			
<b>Panasonic</b>											
Panasonic	AG-3DA1	• P									(6*)
Panasonic	AG-3DP1	• P									(6*)
Panasonic	HDC-Z10000	• P									(6*)
Panasonic	AG-AC30	• P									(6*)
Panasonic	AG-AC130/130A	• P									(6*)
Panasonic	AG-AC160/160A	• P									(6*)
Panasonic	AG-AC30	• P									(6*)
Panasonic	AG-AF100/101/100A	• P									(6*)
Panasonic	AG-HMC150/151/150PJ	• P									(6*)
Panasonic	AG-HMC40/41/40PJ	• P									(6*)
Panasonic	AG-HMC80/81/80PJ	• P									(6*)
Panasonic	AG-HPX250/255/250PJ	• P									(6*)
Panasonic	AG-HPX270PJ	• P									(6*)
Panasonic	AG-HVX200/201/200A/201A	• P									(6*)
Panasonic	AG-HPX175	• P									(6*)
Panasonic	AG-DVX100	• P									(6*)
Panasonic	AG-DVX200	• P									(6*)
Panasonic	AG-DVC30	• P									(6*)
Panasonic	AG-DVC30	• P									(6*)
Panasonic	AG-HMR10	• P									(6*)
Panasonic	AG-HCX10/10G	• P									(6*)
Panasonic	AG-UX90	• P									(6*)
Panasonic	AG-UX180	• P									(6*)
Panasonic	AJ-PX230	• P									(6*)
Panasonic	AJ-PX270PJ	• P									(6*)
Panasonic	HC-X1	• P									(6*)
Panasonic	HC-X1000	• P									(6*)
Panasonic	DMC-GH4	• P									(6*)
Panasonic	DC-GH5	• P									(6*)
<b>JVC</b>											
JVC	GY-HM170	• L	•	•							(7*)
JVC	GY-HM200	• L	•	•							(7*)
JVC	GY-HM600	• L	•	•							(7*)
JVC	GY-HM650	• L	•	•							(7*)
JVC	GY-LS300	• L	•	•							(7*)
<b>Blackmagic</b>											
Blackmagic	Pocket Cinema Camera		•	•							(8*)
Blackmagic	Cinema Camera EF		•	•							(8*)
Blackmagic	Production Camera 4K		•	•							(8*)
Blackmagic	URSA EF		•	•							(8*)
Blackmagic	URSA Mini EF		•	•							(8*)
Blackmagic	Micro Studio Camera 4K		•	•							(3*)
Blackmagic	Studio Camera HD		•	•							(3*)
Blackmagic	Studio Camera 4K		•	•							(3*)

- : compatible
- L : compatible, switch MVR901ECPL to LANC mode
- P : compatible, switch MVR901ECPL to Panasonic mode

(1\*) Iris compatibility: behaviour depends on the camcorder model.  
 (2\*) may not be available: Zoom, Autofocus (depending on lens).  
 (3\*) compatibility of features depends on camera model (e.g. Stand-by, Rec may not be available).  
 (4\*) availability of Zoom, Autofocus, Autoris, Iris controls depends on specific camera model and mounted lens; please refer to camera user manual for more details.  
 (5\*) not available: Rec review, Autoris, Iris.  
 (6\*) not available: Stand-by. Switch MVR901ECPL in Panasonic compatibility.  
 (7\*) not available: Stand-by.  
 (8\*) not available: Stand-by; availability of Zoom depends on lens type.

REMOTE CONTROL	ACCESSORIES			
	MVR901 APCL	522 AV	522 SCA	523 RC
MVR901 ECPL	•	•	•	•
MVR901 ECLA		•	•	•
MVR901 EPLA	•	•	•	•
MVR901 ECEX			•	•
MVR901 EPEX	•			•
MVR911 ECCN				
MVR911 EECN				

**DISCLAIMER**  
 The information contained in this document is subject of change without notice.  
 Manfrotto makes no warranty and shall not be liable for any errors on information contained in this document.  
 All trademarks are property of their respective owners.

